

Universele Afstandsbediening.com

Onderstaand de uitleg van, de toetsen en functies van onze afstandsbediening. Wanneer wij uw afstandsbediening voor geprogrammeerd hebben voor uw televisie toestel, gebruik dan de tabel TV links.

Layout Keys	TV		SAT		DVD		VCR		HI FI	
	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift	Direct	Shift
	on/off Tv	on/off Vcr	on/off Sat		on/off Dvd		on/off Vcr	on/off Tv	Power	
AV	Tv/Av	Av 2	Tv/Sat	Sat Sky	Dvd/Tv	Input Source	Vcr/Tv	Input Source	Input Source	Aux Video
Shift	Shift Key		Shift Key		Shift Key					
Exit	Off Menu		Exit		Return	Syst. Preset	Exit	Syst.	Funct. Direct	Tuner Bypass
Menu	Menu		Menu	Navi Mode	Menu	Mode	Menu	Show View	CD Theater	Fm mode Disc skip
	Menu Audio		Audio	Primafila Jazze Cinema	Top Menu	Audio	Audio	Cass. Tape	Tape 1 Hall/Ats	Phono Scan
	Menu Video		Video	Interat.	Title	Video	Video Go-To	Skip/Search	Tape 2 Pres./eq	Band
1	1		1	De-emph	1	5.1 Ch	1	Once	Pr 1	Disc 1
2	2		2	Swap	2	2.1 Ch	2	Daily	Pr 2	Disc 2
3	3		3	P. lock	3	Pro Logic	3	Weekly	Pr 3	Disc 3
Mute	Audio Off		Audio Off		Audio Off	Open Close	Audio Out	Eject Reverse	Mute	Eject
4	4		4	Wn	4	Ntsc/Pal	4	Otr A. Otr	Pr 4	Disc 4
5	5		5	50/17	5	Effect	5	Rec On/Off	Pr 5	Disc 5
6	6	Help	6	Help	6	EQ	6	Rec Mode Pr/Check	Pr 6	6 Ch Geq
	Disp. Recall		Disp. Recall	22 Khz	Disp.	R/L	Disp.	Timer Record	Display	Ubs Check
7	7		7	Copy Delete	7	Mark	7	Mark Add/Del	Pr 7	Mark Delete
8	8		8	Erase	8	Erase	8	Erase	Pr 8	Erase Snooze
9	9	Clear 00:00	9	Clear	9		9		Pr 9	Clear
Text	Text Tv/Text		Text	Radio	Repeat 1/All	Pbc	Sp/Lp Speed	Repeat	Repeat	Edit
Guide 1.	Guide Sel 1/2	3. *	Guide Pilote	Auth. DSEGC	+10	Digest	-/-	Next Sv+v	Mode	+ 10
0	0/10		0/10	View	0	Dimmer	0	Pal/Secam	Pr 0/10	Dimmer
Fav P/C 2.	2. Fav P/C	4. #	Fav	Alt 16:9	C/Ch	3D	Progr C/Ch	Vps/Pdc	Program	Space Default 3D
TV	Return TV		Tv	Scan Setup	Rep/ A-B	Setup	Mon Tv	Info Intro	Random	Intro
▲	Menu Up	Search	Menu Up	Search	Menu Up	Search	Menu Up	Search Index	CDplay	Search Center +
◀	Menu Left	Tune	Menu Left	Tune	Menu Left	Key	Menu Left	Index Pict	CDrew	Tune Vol Sw -
OK	OK Enter	Alt/Caf	OK Enter	Alt/Caf	OK Enter	Auto Scan	OK Enter	Ch.Memo	CDstop	Center
▶	Menu Right	Tune +	Menu Right	Tune +	Menu Right	Key +	Menu Right	Index Pict +	CD/Fwd	Tune Vol Sw +
▼	Menu Down	Store	Menu Down	Store	Menu Down	Store	Menu Down	Store	CDpause	Store Center -
VOL +	Volume +		Volume +		Volume +	Vocal Assist.	Tracking +	Set +	Volume +	Track -
VOL -	Volume -		Volume -		Volume -	Tone	Tracking -	Set -	Volume -	Track +
CH/ Page -	Chan. Down		Ch/pag		Prev. <<	Echo	Prev. <<	Chan. +	Skip <<<	Index -
CH/ Page +	Chan. Up		Ch/pag		Next >>>	Echo	Next >>>	Chan. -	Skip >>>	Index +
	Sleep Timer	Off/Tim	Sleep Timer	Sys/ Serv	Auto/Track	Timer	Auto/Track	Timer Sleep	Sleep	Classic Track
	Subt. Liste	Onv/Tim	Subt. Liste	+	Subt.	Np	Slow/Dpps	Frame	Vol Rs -	Timer A. Track
	Txt Expand	Game	Zoom	Pers.	Zoom	Game	Slow/Dpps +	Frame	Vol Rs +	X-Bass Bgm
Back	P P Q View	Browse	Back	Browse	Progr.	Remain	T. Set Clock	Count Remain	Wooler Speed	Surround Text Tone
	Update		Epg	West	Slow <	Resume	Slow <	Counter Clock	Every Pop	C. Clock T. Bass -
	Reveal		Opt	Dev	Slow >	Karaoke Step	F. Adv	Counter Memory	Tape 1	Tape 2 <
	Txt Stop		App	Freeze	Stop	Play Back	Stop	Counter Stop	Tape 1	Tape 2 >
	Info P 100		Info	Dec Pause	Pause	Info	Pause	Counter Reset	Pause	T. Alt -
Red	Fastext Red		Red	East	Record	Angle	Record	Audio Dub	Tape 1	Tape 2 >>
Green	Fastext Green		Green	Lang	Rew	Lang	Rew	Encore	Tape 1	Tape 2 >>>
Yellow	Fastext Yellow		Yellow	H/V	Play	Random	Play	X 2 Play	Tape 1	Tape 2 >>>
Blue	Fastext Blue		Blue	Lnb	F. Forw	Shuffle	F. Forw	P. Back R. Play	Tape 1	Tape 2 >>>